


## DSUB 50 pin Breakout Interface Model VSI-Breakout50DSUB

### Features

- Color coded Test Points for every signal on each connector
- Jumper per connection to open circuit or insert signal.
- Pre-mounted on standoffs for multiple mounting options
- DSUB 50 Male to DSUB 50 Female

### Applications

- Debugging / verifying signals
- Injecting known stimulus in signal/cable
- Re-wiring or crossing signals

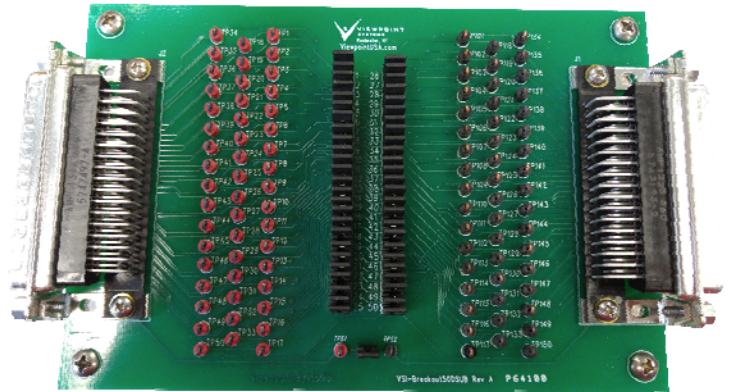

### General Description

The VSI-Breakout50DSUB is a very useful tool in debugging signals or software in a system. It allows unlimited access to signals within the cabling that might otherwise be difficult to access. The board gives test points at each side of the connector and jumper with a easy to use tabbed shunt to allow for easy disconnection of any particular signal between the connectors. The jumpers also give an opportunity to inject a signal regardless of what signal was originally being driven.

### • Key Specifications

- Mounting holes for #6 screws
- All Test Points are labeled according to connector pin number
- 0.07" Diameter Test Points
- 0.1" Jumpers with tabbed shunts
- All Jumpers label with pin number

Viewpoint Systems, Inc., 800 West Metro Park, Rochester, New York 14623

Phone: (585) 475-9555

Fax: (585) 475-9645

[www.viewpointusa.com](http://www.viewpointusa.com)

# VSI-Breakout50DSUB Specifications

## Input

Connector type: DSUB 50

Gender: Male

Screw locks: Yes (removable)

Mating material: Gold contacts; shell is tin

## Output

Connector type: DSUB 50

Gender: Female

Screw locks: Yes (removable)

Mating material: Gold contacts; shell is tin

## Test Points

One Test point per Connector Pin

Test Point Color: Red and Black signifying connector

Size: Wire form loop with 0.07" inside diameter.

Secure grip for J hooks, EZ hooks, grabbers, alligator clips, tips or probes

## Jumpers / Shunts

### Jumper:

Size: 0.1"x0.1", 0.025" Square post

Mating material: Gold over Nickel

### Shunt:

Plastic tab for easy removal/insertion

Mating Material Gold over Nickel

## Options


### Cables

Cable M/M 50pin 6ft ; Order Part number:VSI-Cable-DB50-6

Cable M/M 50pin 10ft ; Order Part number:VSI-Cable-DB50-10

Pack of 10 Multi-colored 12" jumper cables;

Order Part number: VSI-Jumper10Pack

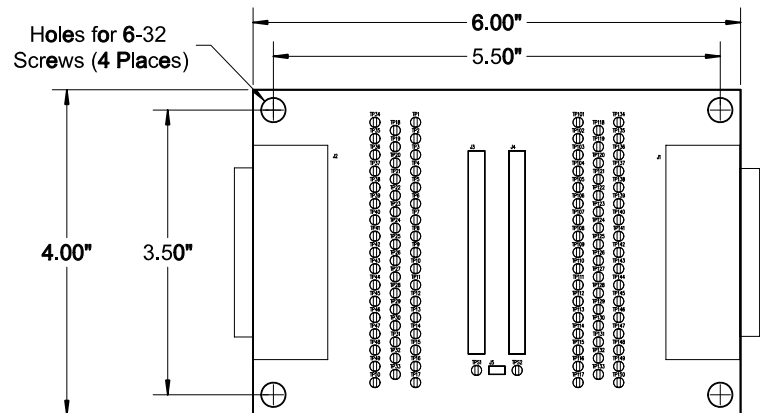

0.65" Component Height Max

Outline and Mounting

Viewpoint Systems, Inc., 800 West Metro Park, Rochester, New York 14623

Phone: (585) 475-9555 Fax: (585) 475-9645

www.ViewpointUSA.com

Rev A